




 

 



 



 

 

 
 
 

 



 
 


 









 





 

 



 


















Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Pre Ch
	CH List		List
	EPG		Guide
	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Info		Info
	Menu		Menu
	Mute		Mute
	Exit		Exit
	Return		Back
	Media		Media
	Eco		Shift + 3D
	FAV		Shift + Pre Ch
	HiSmart@		Smart
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original	Replacement	Original	Replacement
 Red	 Red	 >>/Index	 >>
 Green	 Green	 I<</Sub.Code	 I<<
 Yellow	 Yellow	 >>I/Cancel	 >>I
 Blue	 Blue		
 Subt.	 Subt		
 Text/Mix	 Text		
 P.Mode	 Shift + Format		
 Language/I/II	 Dual		
 S.Mode	 Shift + Dual		
 Size	 Format		
 T.Shift	 Sleep		
 Still/Reveal	 Options		
 Rec/PVR	 Rec		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 <</Hold	 <<		

