

Preparation before Operation

- Remove the batteries (Fig. 1) until remote controller display nothing (Fig. 2) and then reinstall the batteries again (Fig. 3), then match the remote controller with the unit by long pressing "MATCH" button for 5s within 3 minutes (Fig. 4), then press "MATCH" button again to match with the indoor unit, when the indoor unit gives out a "de" sound, matching is done. Matching code state can be switched circularly in the sequence of "A-b-C-d-E-F" and they will be displayed on the remote controller.

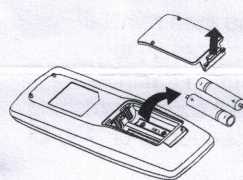
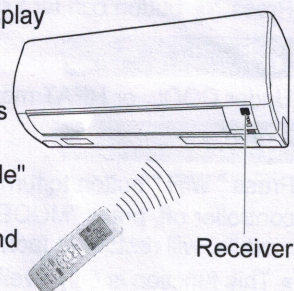


Fig. 1



Fig. 2

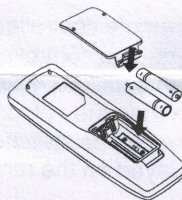


Fig. 3

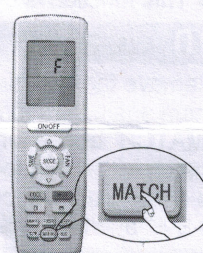


Fig. 4

- This is a general use remote controller, it could be used for the air conditioners with multifunction; For some function, which the model doesn't have, if press the corresponding button on the remote controller that the unit will keep the original running status.

1 ON/OFF button

Press this button can turn on or turn off the air conditioner.

2 SAVE button

Under cooling mode, press this button to start up or turn off energy-saving function.

3 FAN button

Pressing this button can set fan speed circularly as: auto (AUTO), low (■), medium (■■), high (■■■), turbo (⊙).

4 MODE button

Press this button to select your required operation mode circularly as: AUTO (△), COOL (❄), DRY (☂), FAN (⊙), HEAT (☀).


5 ▲/▼ button


Press "▲" or "▼" button can increase or decrease set temperature.

6 COOL / HEAT button

Press COOL button, unit will operate in cool mode. Press HEAT button, unit will operate in heat mode.

7 ☀ / ❄ button

Press  button can turn on or turn off the left&right swing function.

Press  button can turn on or turn off the up&down swing function.

8 SLEEP button

Under COOL, or HEAT mode, press this button to start up sleep function.

9 WiFi button

Press "WiFi" button to turn on or turn off WiFi function. Under status of remote controller off, press "MODE" and "WiFi" buttons simultaneously for 1s, WiFi module will restore to factory default setting.

- This function is only available for some models.

10 MATCH button

Remove the batteries until remote controller display nothing and then reinstall them again, then match the remote controller with the unit by long pressing "MATCH" button for 5s within 3 minute, then press "MATCH" button again to match with the indoor unit. When the indoor unit gives out a "de" sound, matching is done. Matching code state can be switched circularly in the sequence of "A-b-C-d-E-F" and they will be displayed on the remote controller.

11 LIGHT button

Press this button to turn on or turn off display light on indoor unit.

12 °C/°F button

Press this button to switch temperature display between °C and °F.

13 TIMER button

- At ON status, press this button once can set TIMER OFF. The character of HOUR and OFF will flash. Press "▲" or "▼" button within 5s can adjust the time of TIMER OFF. After that, press "TIMER" button to confirm it.
- At OFF status, press this button once can set TIMER ON. Please refer to TIMER OFF for detailed operation.
Cancel TIMER ON/OFF: Press "TIMER" button again under TIMER ON/OFF status.

Set function for upper/lower limit of Energy Save temperature

Within 3min after the remote controller is energized and under OFF status, hold "MODE" and "▲" button simultaneously for 5s to set the upper limit of Energy Save temperature. The upper limit value of temperature will flash. Press "▲" or "▼" button within 5s to adjust the upper limit of temperature; then press "MODE" and "▲" buttons simultaneously to confirm it. The upper limit value will also be confirmed after flashing for 5s. Similarly, hold "MODE" and "▼" buttons simultaneously for 5s to set the lower limit of Energy Save temperature.

Note: Hold "SAVE" and "FAN" buttons simultaneously for 5s can reset the set temperature to ex-factory status 16°C~30°C(61°F~86°F).

Child lock function

Press "▲" and "▼" simultaneously to turn on or turn off child lock function.