

LAUSON
SAT/DTT
1037

Mandis Shop S.L.
Sant Cugat del Vallès - Barcelona
info@mandis.es

Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
	Power		PICh +	CH +	Capitolo successivo
MUTE	Mute		PICh -	CH -	Capitolo precedente
1 ..?	1		VOL +	Vol +	
2 ABC	2		VOL -	Vol -	
3 DEF	3			Freccia su	
4 GHI	4			Freccia giu	
5 JKL	5		OK	Ok/Enter	
6 MNO	6			Freccia sinistra	
7 PQRS	7			Freccia destra	
8 TUV	8		MENU	Menu	
9 WXYZ	9		EXIT RETURN	Exit	
0/10	0		TOP MENU	Audio	
GUIDE	Recall		PICT TITLE	File	
FAV	Fav		EPG	Epg	
AUTO/TRK	Timeshift				
SUBT	Subtitle				Stop
AV Dvd/Tv				Device	
	Digest			Info	
TEXT	Teletext		RED ●	Tasto rosso	Record
TV	TV/Radio		GREEN	Tasto verde	Fast RW
BACK	Repeat	Repeat	YELLOW	Tasto giallo	Play/Pause
			BLUE	*	Fast FW