







 
 


 

 


 

 





 




 



 













 
 









 
 




Original		Replacement		Original		Replacement	
	Power		Power		Source		SRC
	OK		OK		TTX/MIX		TEXT
	Up		UP		1		1
	Down		DOWN		2		2
	Right		RIGHT		3		3
	Left		LEFT		4		4
	Return		BACK		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	Extra		MEDIA		8		8
	Mute		MUTE		9		9
	Vol+		VOL +		0		0
	Vol-		VOL -		PRE-CH		P/C / FAV
	Guide		- / - / EPG		Exit		EXIT
	CH+		CH +		Info		INFO
	CH-		CH -		Menu		MENU
	Home		VOD		Red		Red (A)





Original	Replacement	Original	Replacement
Green	 Green (B)		
Yellow	 Yellow (C)		
Blue	 Blue (D)		
 123	 TV/R		
Tools	 OPT+		
Stop	 Stop		
Rec	 Rec		
<</ <<	 Rewind		
>>/>>	 Fast Forward		
CH List	 WIDE		
AD/Subt.	 Subt.		
E-Manual	 Audio		

