



Original	Replacement
POWER	Power
INFO	Info / Angle
HDMI CONTROL	Smart / List
SLEEP	Sleep / Timer
SCREEN	Picture / Format
SOURCE	AV / Input / RDS
PRESETS	Setup / OPT /
1	1
2	2
3	3
ZOOM/RED/▲	Zoom / Size
ZOOM/RED/▲	Shift + CH+ /
ZOOM/RED/▲	Red / Netflix / Search
4	4
5	5
6	6
REPEAT/GREEN/▼	Shift + CH- / Page-

Original	Replacement
REPEAT/GREEN/▼	Green / APP / Repeat
7	7
8	8
9	9
ROOT/YELLOW	Yellow / YouTube / Repeat
RETURN	Back / Return
0	0
MENU	Menu / Home
TITLE/BUE	Sound / Title
TITLE/BUE	Blue / Prime Video / Random
UP	Up
LEFT	Left
OK/SELECT	OK
RIGHT	Right
DOWN	Down
P+	CH+ / Page+
P-	CH- / Page-





Original	Replacement
V-	Vol-
V+	Vol+
FAV	Fav / Marker / PC
LANG	Audio / Lang I/II
SUBTITLE	Subtitle / EQ
MUTE	Mute / Dimmer
SWAP/↔	Shift + Back / Return
EPG	Guide / EPG / -/--
[*] / [··]	D.Menu / Top
TEXT	Text / Goto
C	Exit / Cancel / Clear
DISPLAY	Display / Media
ANGLE	Shift + Info / Angle
SEARCH MODE	Shift + Red / Netflix /
REC	Rec / Rec Mode
STOP	Stop / Hold
PLAY	Play / Slow

Original	Replacement
PAUSE	Pause / Step / Freeze
<< button"/> <<	<< / Tune-
>> button"/> >>	>> / Tune+
I<<	I<< / Preset-
>>I button"/> >>I	>>I / Preset+

