



| Original | Replacement |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  AV/Source |  AV / Input / RDS |
|  0 |  0 |
|  Exit |  Exit / Cancel / Clear |
|  -/-- |  Shift + Guide / EPG / -/-- |
|  CH+ |  CH+ / Page+ |
|  [i]/Info |  Info / Angle |

| Original | Replacement |
|--|---|
|  Vol+ |  Vol+ |
|  CH- |  CH- / Page- |
|  I-II |  Audio / Lang I/II |
|  Vol- |  Vol- |
|  Up |  Up |
|  Left |  Left |
|  OK/Select |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  TV/DTV |  TV/Radio / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  [≡]/Text |  Text / Goto |
|  [≡o] |  Sleep / Timer |





| Original | | Replacement | |
|----------|-----------------|-------------|-------------------|
| | [≡+]/[X] | | << / Tune- |
| | >> / Tune+ | | |
| | [.] / [*] | | ∟<< / Preset- |
| | [≡◊] / [+]/Wide | | Picture / Format |
| | [≡?] | | >>∟ / Preset+ |
| | [≡i] / Guide | | Guide / EPG / -/- |
| | P<P/SWAP | | Fav / Marker / PC |
| | PP | | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

