













 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV/Source	 AV / Input / RDS
 0	 0
 Exit	 Exit / Cancel / Clear
 -/--	 Shift + Guide / EPG / -/--
 CH+	 CH+ / Page+
 [i]/Info	 Info / Angle

Original	Replacement
 Vol+	 Vol+
 CH-	 CH- / Page-
 I-II	 Audio / Lang I/II
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 TV/DTV	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡o]	 Sleep / Timer





Original	Replacement	Original	Replacement
 [=+]/[X]	 TUNE- << / Tune-		
 [=x]/[..]	 TUNE+ >> / Tune+		
 [.]/*]	 PRESET- I<< / Preset-		
 [=◆]/[+]/Wide	 FORMAT PICTURE Picture / Format		
 [=?]	 PRESET+ >>I / Preset+		
 [=i]/Guide	 GUIDE EPG Guide / EPG / -/--		
 P<P/SWAP	 PC FAV MARKER Fav / Marker / PC		
 PP	 RETURN BACK Back / Return		

Original	Replacement	Original	Replacement

