











































 

 

 









 





 
 






Original	Replacement	Original	Replacement
	Power		Smart Hub
	Source		VOL +
	HDMI		VOL -
	1		CH +
	2		CH -
	3		Guide
	4		Menu
	5		Tools
	6		Info
	7		Up
	8		Enter
	9		Down
	0		Right
	TTX/MIX		Left
	PRE-CH		Return
	Mute		Exit
	CH List		Red (A)
	Power		VOD
	SRC		VOL +
	MEDIA		VOL -
	1		CH +
	2		CH -
	3		-/-- / EPG
	4		MENU
	5		OPT+
	6		INFO
	7		UP
	8		OK
	9		DOWN
	0		RIGHT
	TTX/MIX		LEFT
	PRE-CH		BACK
	Mute		EXIT
	CH List		Red (A)





Original		Replacement		Original	Replacement
	Green		Green (B)		
	Yellow		Yellow (C)		
	Blue		Blue (D)		
	Search		Audio		
	P.Size		V-FOR		
	Status		WIDE		
	AD/Subt.		Subt.		
	E-Manual		Shift + EPG -/- / EPG		
	History		Shift + P/C / FAV		
	<</l<<		Rewind		
	Pause		Pause		
	>>/l>>		Fast Forward		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

