 





 


 



 

 





 

 

 

 








 





 




Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 16:9	 Picture / Format
 0/FAV	 Fav / Marker / PC
 0/FAV	 0
 [O]/Repeat	 Shift + Green / APP /
 Vol+	 Vol+
 Input	 AV / Input / RDS

Original	Replacement
 P+	 CH+ / Page+
 Vol-	 Vol-
 EPG/?/A-B	 Shift + Yellow / YouTube /
 EPG/?/A-B	 Guide / EPG / -/--
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Q/Double	 Shift + Red / Netflix /
 M	 Menu / Home
 ←	 Back / Return
 i	 Info / Angle
 Red	 Red / Netflix / Search
 Play/Pause	 Play / Slow
 Green	 Green / APP / Repeat





	Original	Replacement	Original	Replacement
	<<	 << / Tune-		
	Yellow	 Yellow / YouTube / Repeat		
	Stop	 Stop / Hold		
	Blue	 Blue / Prime Video / Random		
	>>	 >> / Tune+		
	I<<	 I<< / Preset-		
	TXT	 Text / Goto		
	>>I	 >>I / Preset+		
	[...]	 Subtitle / EQ		
	Audio	 Audio / Lang I/II		

