


 
 


 
 
 



 






Original	Replacement	Original	Replacement
 Power	 Power	 OK	 OK
 [=]/Text	 Text / Goto	 Right	 Right
 I-II	 Audio / Lang I/II	 Down	 Down
 [<>]/[+]	 Shift + Picture / Format	 A/D	 Shift + Audio / Lang I/II
 AV/[?]	 AV / Input / RDS	 EPG	 Guide / EPG / -/-
 Red	 Red / Netflix / Search	 Vol+	 Vol+
 Green	 Green / APP / Repeat	 Mute	 Mute / Dimmer
 Yellow	 Yellow / YouTube / Repeat	 PR+	 CH+ / Page+
 Blue	 Blue / Prime Video / Random	 Vol-	 Vol-
 [...]	 Subtitle / EQ	 PR-	 CH- / Page-
 [1 2] Split Window	 Display / Media	 1	 1
 Cancel	 Exit / Cancel / Clear	 2	 2
 Option	 Setup / OPT /	 3	 3
 Tv Menu	 Menu / Home	 4	 4
 Digital Menu	 D.Menu / Top	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7





	Original	Replacement		Original	Replacement
		 8			8
		 9			9
		[i+]  Info / Angle			
		 0			0
		 P<P/Back			Back / Return
		[-O-]/Active Ctrl 			Smart / List
		DV3/Tv/Radio 			TV/Radio /
		Sound Smart 			Sound / Title
		Picture Smart 			Picture / Format

