





 









 









 


















 







 

 



 
 


 
 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Tv	 TV/Radio /	 Source	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 FAV CH	 Fav / Marker / PC	 Right	 Right
 0	 0	 CH LIST	 Smart / List
 PRE CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	Media P		Display / Media
	P SIZE		Zoom / Size
	Dual		Audio / Lang I/II
	AD		Eject / Surround
	SUBT		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Replacement

