




Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement
 CEC	 Smart / List
 ?	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Vol+	 Vol+
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





	Original	Replacement	Original	Replacement
	 PR-	 CH- / Page-		
	 <	 << / Preset-		
	 >	 >> / Preset+		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 ■ Stop	 Stop / Hold		
	 [<>]	 Picture / Format		
	 Dialog	 Audio / Lang I/II		
	 [...] [...]	 Subtitle / EQ		
	 Tv/Radio	 TV/Radio /		
	 My Media	 Display / Media		

