






 

 
 

 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	VOL+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Replacement	Original	Replacement
	VOL-		Vol-
	CH.LIST		Display / Media
	CH.LIST		Shift + Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Smart HUB		Smart / List
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green/B	 Green / APP / Repeat		
 Yellow/C	 Yellow / YouTube / Repeat		
 Blue/D	 Blue / Prime Video / Random		
 E-Manual	 D.Menu / Top		
 3D	 Picture / Format		
 AD/Subt	 Subtitle / EQ		
 Stop	 Stop / Hold		
 I<<	 I<< / Preset-		
 <<	 << / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		

