



Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	PRE-CH
	Vol+
	Mute
	P+

Original	Replacement
	Vol-
	CH List
	CH List
	P-
	Menu
	Smart Hub
	Guide
	Tools
	Up
	Info
	Left
	Enter
	Right
	Return
	Down
	Exit
	Red/A





Original		Replacement		Original	Replacement
	Green/B		Green / APP / Repeat		
	Yellow/C		Yellow / YouTube / Repeat		
	Blue/D		Blue / Prime Video / Random		
	E-Manual		D.Menu / Top		
	Sports		TV/Radio /		
	AD/SUBT		Subtitle / EQ		
	AD/SUBT		Audio / Lang I/II		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	l<<		l<< / Preset-		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	>>l		>>l / Preset+		

