



Original	Replacement
Power	Power
Power Tv	Shift + Power
DVD	Shift + 2
VCR	Shift + 4
Eject/Open-Close	Eject / Surround
AV Input Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Rec	Rec / Rec Mode
0	0
AV Input	AV / Input / RDS
Vol- Tv	Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
PR/TRK+	Shift + CH+ /
Up	Up
Menu/List	D.Menu / Top
Left	Left





Original	Replacement
	OK
	Right
	Back / Return
	Down
	+ Shift + CH /
	Display / Media
	Audio / Lang I/II
	Sound / Title
	Fav / Marker / PC
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Guide / EPG / --
	Smart / List

Original	Replacement

