























 



 

 



 

 



 



 



 



 

 



 



 









| Original | | Replacement | | Original | | Replacement | |
|---|-------------|---|-----------------------|---|----------|---|-----------------------|
|  | Power |  | Power |  | 9 |  | 9 |
|  | PRO/TV/TXT |  | TV/Radio / |  | FAV |  | Fav / Marker / PC |
|  | Slow/Cancel |  | Shift + Play / |  | 0 |  | 0 |
|  | Rep/Reveal |  | Shift + Back / Return |  | Recall |  | Back / Return |
|  | TV/AV |  | AV / Input / RDS |  | Vol+ |  | Vol+ |
|  | <</Hold |  | << / Tune- |  | CH+ |  | CH+ / Page+ |
|  | >>/Size |  | >> / Tune+ |  | Up |  | Up |
|  | l<</Subpage |  | l<< / Preset- |  | Left |  | Left |
|  | >>l/Index |  | >>l / Preset+ |  | OK |  | OK |
|  | 1 |  | 1 |  | Right |  | Right |
|  | 2 |  | 2 |  | Vol- |  | Vol- |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | CH- |  | CH- / Page- |
|  | 5 |  | 5 |  | Menu |  | Menu / Home |
|  | 6 |  | 6 |  | Exit |  | Exit / Cancel / Clear |
|  | 7 |  | 7 |  | Nicam/A2 |  | Text / Goto |
|  | 8 |  | 8 |  | Display |  | Display / Media |





| | Original | Replacement | | Original | Replacement |
|--|-------------------|-----------------------------|--|----------|-------------|
| | Mute | Mute / Dimmer | | | |
| | Picture | Picture / Format | | | |
| | Sound | Sound / Title | | | |
| | Sleep | Sleep / Timer | | | |
| | Subtitle | Subtitle / EQ | | | |
| | LAN/EPG | Audio / Lang I/II | | | |
| | Pause | Pause / Step / Freeze | | | |
| | Play | Play / Slow | | | |
| | Set/CH/List | Setup / OPT / | | | |
| | D-Menu/List | D.Menu / Top | | | |
| | Stop | Stop / Hold | | | |
| | Record | Rec / Rec Mode | | | |
| | Open/Close | Eject / Surround | | | |
| | Red/Zoom | Red / Netflix / Search | | | |
| | Green/Goto | Green / APP / Repeat | | | |
| | Yellow/Title | Yellow / YouTube / Repeat | | | |
| | Blue/Angle/Screen | Blue / Prime Video / Random | | | |

