 



 





















 















 



 

 

 
 

 
 



 

 

 
 





 
 
 




 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Guide		Guide / EPG / -/-
	4		4		Tools		Setup / OPT /
	5		5		Exit		Exit / Cancel / Clear
	6		6		Return		Shift + Back / Return
	7		7		Smart HUB		Smart / List
	8		8		Info		Info / Angle
	9		9		OK		OK
	0		0		Up		Up
	TTX/MIX		Text / Goto		Down		Down
	PRE_CH		Back / Return		Right		Right
	Mute		Mute / Dimmer		Left		Left
	CH List		Shift + Smart / List		Red/A		Red / Netflix / Search
	Vol+		Vol+		Green/B		Green / APP / Repeat





Original	Replacement
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 ADJ/SUBT	 Subtitle / EQ
 P.Size	 Zoom / Size
 E-Manual	 D.Menu / Top
 Social TV	 Shift + Green / APP /
 Search	 Shift + Red / Netflix /
 Play	 Play / Slow
 3D	 Display / Media
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 <</ <<	 << / Tune-
 >>/>>	 >> / Tune+
 Rec	 Rec / Rec Mode

Original	Replacement

