

 









 

 























Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 PRE-CH	 Back / Return
 Mute	 Mute / Dimmer
 CH List	 Shift + Smart / List
 Vol+	 Vol+

Original	Replacement
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Exit	 Exit / Cancel / Clear
 Return	 Shift + Back / Return
 Smart HUB	 Smart / List
 Info	 Info / Angle
 OK	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat





	Original	Replacement	Original	Replacement
	Yellow/C	Yellow / YouTube / Repeat		
	Blue/D	Blue / Prime Video / Random		
	ADJ/SUBT	Subtitle / EQ		
	P.Size	Zoom / Size		
	E-Manual	D.Menu / Top		
	Social TV	Shift + Green / APP /		
	Search	Shift + Red / Netflix /		
	Play	Play / Slow		
	3D	Display / Media		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	<</ <<	<< / Tune-		
	>>/>>I	>> / Tune+		
	Rec	Rec / Rec Mode		

