







 

 

 

 











 

 

 


Original	Replacement
 Power	 Power
 Portal/Energy Saving	 Sleep / Timer
 []/Ratio	 Picture / Format
 Input	 AV / Input / RDS
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.View	 D.Menu / Top

Original	Replacement
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 PR+/Page Up	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 PR-/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Settings	 Setup / OPT /
 Info/Home	 Info / Angle
 Q.Menu/3D	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Guide	 Guide / EPG / -/-





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Text	 Text / Goto		
 T.Opt	 Shift + Setup / OPT / Tools		
 Subtitle	 Subtitle / EQ		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Simplink	 Display / Media		
 AD	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		
 My APPS	 Shift + Green / APP / Repeat		

Original	Replacement

