



| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  Up |  Up |
|  Play |  Play / Slow |  i |  Info / Angle |
|  Pause |  Pause / Step / Freeze |  Left |  Left |
|  Stop |  Stop / Hold |  OK |  OK |
|  Rec |  Rec / Rec Mode |  Right |  Right |
|  << |  << / Tune- |  Exit |  Exit / Cancel / Clear |
|  >> |  >> / Tune+ |  Down |  Down |
|  Lang |  Audio / Lang I/II |  Back |  Back / Return |
|  Source (Games) |  Eject / Surround |  Vol+ |  Vol+ |
|  Movie-Music-Phot |  Picture / Format |  World (Violet) |  Smart / List |
|  [≡].. |  Zoom / Size |  PR+ |  CH+ / Page+ |
|  */O |  Sleep / Timer |  Vol- |  Vol- |
|  TV |  TV/Radio / |  */Q |  Display / Media |
|  Q.Menu |  D.Menu / Top |  PR- |  CH- / Page- |
|  [-O-] |  Setup / OPT / |  1 |  1 |
|  [≡]/Text |  Text / Goto |  2 |  2 |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------------------|-----------------------------|
| 3 def | 3 | CD - STB 3 | 3 |
| 4 ghi | 4 | VIDEO 4 | 4 |
| 5 jkl | 5 | TAPE 5 | 5 |
| 6 mno | 6 | TUNER 6 | 6 |
| 7 pqrs | 7 | AUX - HDD 7 | 7 |
| 8 tuv | 8 | USB 8 | 8 |
| 9 wxyz | 9 | BLUETOOTH 9 | 9 |
| Guide | Guide | GUIDE EPG | Guide / EPG / -/-- |
| 0 | 0 | HDMI - SAT 0 | 0 |
| Red | Red | NETFLIX SEARCH | Red / Netflix / Search |
| Green | Green | APP REPEAT | Green / APP / Repeat |
| Yellow | Yellow | YouTube REPEAT A-B | Yellow / YouTube / Repeat |
| Blue | Blue | Prime Video RANDOM | Blue / Prime Video / Random |
| Recall | Recall | SHIFT + RETURN BACK | Shift + Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

