



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 i	 Info / Angle
 Pause	 Pause / Step / Freeze	 Left	 Left
 Stop	 Stop / Hold	 OK	 OK
 Rec	 Rec / Rec Mode	 Right	 Right
 <<	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>	 >> / Tune+	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 Source (Games)	 Eject / Surround	 Vol+	 Vol+
 Movie-Music-Phot	 Picture / Format	 World (Violet)	 Smart / List
 [≡]..	 Zoom / Size	 PR+	 CH+ / Page+
 */O	 Sleep / Timer	 Vol-	 Vol-
 TV	 TV/Radio /	 */Q	 Display / Media
 Q.Menu	 D.Menu / Top	 PR-	 CH- / Page-
 [-O-]	 Setup / OPT /	 1	 1
 [≡]/Text	 Text / Goto	 2	 2





	Original	Replacement	Original	Replacement
	3	CO- STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	Guide	GUIDE EPG		
	0	HDMI - BAT 0		
	Red	NETFLIX SEARCH		
	Green	APP REPEAT		
	Yellow	YouTube REPEAT A-B		
	Blue	Prime Video RANDOM		
	Recall	SHIFT + RETURN BACK		

