 




 
 




 

 


 

 











Original	Replacement
 Tv	 TV/Radio /
 Power	 Power
 World	 Smart / List
 [≡]/Text	 Text / Goto
 Sleep	 Sleep / Timer
 Music/Movie/Phot	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source/Games	 AV / Input / RDS
 0	 0

Original	Replacement
 Recall	 Shift + Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 i	 Info / Angle
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right



