



Original	Replacement
Tv	TV/Radio /
Power	Power
World	Smart / List
[=]/Text	Text / Goto
Sleep	Sleep / Timer
Music/Movie/Phot	Sound / Title
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Source/Games	AV / Input / RDS
0	0

Original	Replacement
Recall	Shift + Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right





Original		Replacement		Original		Replacement	
	Back		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	[≡]..		Setup / OPT /				
	Lang		Audio / Lang I/II				
	O/*		Zoom / Size				
	Q./.*		Picture / Format				
	Play		Play / Slow				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	Guide		Guide / EPG / -/--				
	[-O-]		Display / Media				

