



Original	Replacement
	
Power	Power
	
Source	AV
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
Recall	Pre Ch
	
TV	TV/R
	
Menu	Menu
	
Q.Menu	D. Menu
	
World	Shift + Guide

Original	Replacement
	
OK	Ok
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
PR+	Ch +
	
PR-	Ch -
	
Vol+	Vol +
	
Vol-	Vol -
	
Exit	Exit
	
Back	Back
	
Mute	Mute
	
i	Info
	
Guide	Guide
	
[≡]/Text	Text
	
Folder	Format
	
[-O-]	Subt





Original	Replacement	Original	Replacement
 */O	 Sleep		
 */Q	 Eject		
 Netflix	 Media		
 Camera-Music-Ph	 Options		
 YouTube	 3D		
 [≡]..	 List		
 Lang	 Dual		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Play	 Play		
 Rec	 Rec		
 Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Stop	 Stop		

