







 






| Original  | Replacement   |
|---|---|
|  Power           |  Power                   |
|  Info            |  Info / Angle            |
|  Mute            |  Mute / Dimmer           |
|  1               |  1                       |
|  2               |  2                       |
|  3               |  3                       |
|  4               |  4                       |
|  5               |  5                       |
|  6               |  6                       |
|  7               |  7                       |
|  8              |  8                      |
|  9             |  9                     |
|  Source        |  AV / Input / RDS      |
|  0             |  0                     |
|  O)/I-II/Audio |  Audio / Lang I/II     |
|  Menu          |  Menu / Home           |
|  Exit          |  Exit / Cancel / Clear |

| Original   | Replacement  |
|--|--|
|  Up       |  Up                       |
|  Left     |  Left                     |
|  Enter    |  OK                       |
|  Right    |  Right                    |
|  Down     |  Down                     |
|  CH+      |  CH+ / Page+              |
|  Index    |  Display / Media          |
|  Vol+     |  Vol+                     |
|  CH-      |  CH- / Page-              |
|  List     |  Smart / List             |
|  Vol-    |  Vol-                    |
|  ♥      |  Fav / Marker / PC      |
|  Sleep  |  Sleep / Timer          |
|  EPG    |  Guide / EPG / -/-      |
|  Recall |  Back / Return          |
|  Red    |  Red / Netflix / Search |
|  <<     |  << / Tune-             |







































| Original  | Replacement                         | Original | Replacement |
|---|-------------------------------------|----------|-------------|
|    | Green<br>Green / APP / Repeat       |          |             |
|    | >><br>>> / Tune+                    |          |             |
|    | Yellow<br>Yellow / YouTube / Repeat |          |             |
|    | l<<<br>l<< / Preset-                |          |             |
|    | Blue<br>Blue / Prime Video / Random |          |             |
|    | >>l<br>>>l / Preset+                |          |             |
|    | [≡]<br>Text / Goto                  |          |             |
|    | Play<br>Play / Slow                 |          |             |
|    | Pause<br>Pause / Step / Freeze      |          |             |
|   | [≡+]<br>Zoom / Size                 |          |             |
|  | Stop/Still<br>Stop / Hold           |          |             |
|  | Radio<br>TV/Radio /                 |          |             |
|  | [≡◆]/[++]<br>Setup / OPT /          |          |             |
|  | [≡x]<br>Picture / Format            |          |             |
|  | [≡o]/Subtitle<br>Subtitle / EQ      |          |             |
|  | DMP<br>D.Menu / Top                 |          |             |
|  | Rec<br>Rec / Rec Mode               |          |             |







| Original  | Replacement   |
|---|---|
|  Power             |  Power                 |
|  Mute              |  Mute / Dimmer         |
|  Text / Play/Pause |  Play / Slow           |
|  Text / Play/Pause |  Pause / Step / Freeze |
|  Stop / Still      |  Stop / Hold           |
|  Rec               |  Rec / Rec Mode        |
|  Audio I/II        |  Audio / Lang I/II     |
|  Subtitle / [≡o]   |  Subtitle / EQ         |
|  [≡x]              |  Picture / Format      |
|  Size / Aspect     |  Zoom / Size           |
|  Sleep            |  Sleep / Timer        |
|  Radio           |  TV/Radio /          |
|  DMP             |  D.Menu / Top        |
|  Source          |  AV / Input / RDS    |
|  Menu            |  Menu / Home         |
|  Up              |  Up                  |
|  Info            |  Info / Angle        |

| Original   | Replacement   |
|--|---|
|  Left   |  Left                  |
|  Enter  |  OK                    |
|  Right  |  Right                 |
|  Exit   |  Exit / Cancel / Clear |
|  Down   |  Down                  |
|  Recall |  Back / Return         |
|  Vol +  |  Vol+                  |
|  List   |  Smart / List          |
|  CH +   |  CH+ / Page+           |
|  Vol -  |  Vol-                  |
|  Index |  Display / Media      |
|  CH - |  CH- / Page-         |
|  1    |  1                   |
|  2    |  2                   |
|  3    |  3                   |
|  4    |  4                   |
|  5    |  5                   |



