 
 

 

 












 


 

 



 

 





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [TV]	 TV/Radio /
 Internet	 Smart / List
 ↔	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 Vol+	 Vol+

Original	Replacement
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 OK	 OK
 Menu	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 i	 Info / Angle
 EPG	 Guide / EPG / -/-
 TXT	 Text / Goto
 Lang.	 Audio / Lang I/II
 Subt.	 Subtitle / EQ





Original	Replacement	Original	Replacement
	Red Red / Netflix / Search		
	[>] Picture / Format		
	[+] Zoom / Size		
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	*1/O Shift + 1		
	*2/Q Shift + 2		
	Blue Blue / Prime Video / Random		
	Rec Rec / Rec Mode		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	>> >> / Tune+		
	<< << / Tune-		
	Stop Stop / Hold		

