



 
 
 

 

 

 






 
 
 
 



 




 







 
 
 

 

 







 


 

 
 




 
 


 

 




Original		Replacement		Original		Replacement	
	Power		Power		P-		Ch -
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		OK		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu
	8		8		Home		Smart
	9		9		Exit		Exit
	0		0		Back		Back
	Recall		Pre Ch		Guide		Guide
	3D		3D		Text		Text
	Mute		Mute		[>]		Options
	[i+]		Info		Quick		TV/R
	P+		Ch +		* / O		Format





Original		Replacement		Original	Replacement
	Subtitle		Subt		
	O)/I/II		Dual		
	*/Q	 + 	Shift + Format		
	[+ +]		Eject		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Pause		Pause		
	Play		Play		
	Stop		Stop		
	Rec		Rec		
	>>		>>		
	<<		<<		

