



Original	Replacement
Power	Power
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
*	D.Menu / Top
Cable	AV / Input / RDS
1	1
Live Zoom	Zoom / Size
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
Search	Display / Media

Original	Replacement
Guide	Guide / EPG / -/--
0/Quick Access	0
Info	Info / Angle
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
P+	CH+ / Page+
P-	CH- / Page-
Home	Menu / Home
Back	Back / Return
Exit	Exit / Cancel / Clear
Text	Text / Goto
Up	Up
Netflix	Shift + Red / Netflix /
Down	Down
Amazon	Shift + Blue / Prime
Right	Right





Original	Replacement	Original	Replacement
T.Opt/Magic Link	Setup / OPT /		
Left	Left		
OK	OK		
AD	Audio / Lang I/II		
Rec	Rec / Rec Mode		
<<	<< / Tune-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Stop/Line Tv	Stop / Hold		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

Original	Replacement	Original	Replacement

