 








 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol -
 Source	 AV	 PR+	 Ch +
 Tv/DTV	 TV/R	 PR-	 Ch -
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Return	 Back
 4	 4	 Tools	 Options
 5	 5	 Red	 Red
 6	 6	 Green	 Green
 7	 7	 Yellow	 Yellow
 8	 8	 Blue	 Blue
 9	 9	 [≡]/Text	 Text
 0	 0	 Ch.List	 List
 PRE-CH	 Pre Ch	 Subt.	 Subt
 -/--	 Shift + Guide	 P.Size	 Format
 Mute	 Mute	 Guide	 Guide
 Vol+	 Vol +	 Enter	 Ok





Original	Replacement	Original	Replacement
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Info	 Info		

