 



 







 


 




 
 

 
 











 




 



 



 





 










 




Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Home	 Smart
 4	 4	 Info	 Info
 5	 5	 Favorite	 Shift + Pre Ch
 6	 6	 Mute	 Mute
 7	 7	 Input	 AV
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CH+	 Ch +
 .	 Guide	 CH-	 Ch -
 Recall	 Pre Ch	 Picture	 Format
 Enter	 Ok	 Zoom	 Eject
 Up	 Up	 Audio	 Shift + Dual
 Down	 Down	 CCD	 Subt





Original		Replacement		Original		Replacement	
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	MTS/SAP		Dual				
	CH List		List				
	Sleep		Sleep				
	Video		Red				
	HDMI		Green				
	ACC		Yellow				

