 
 
 
 

 
 

 




 
 
 

 
 
 



 





 
 
 
 

 







 


 
 






 
 


 
 
 
 

 
 

 

 
 
 

 

 



 
 





Original	Replacement
 Power	 Power
 Menu	 Menu
 3D	 3D
 TV Input	 TV/R
 AV Input	 AV
 i	 Info
 Exit	 Exit
 APPS	 Media
 Home	 Smart
 Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Option	 Options
 Return/Back	 Back

Original	Replacement
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Mute	 Mute
 Text	 Text
 STTL	 Subt
 [+]/Aspect	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	0			
	?/Help			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec	