 



 

 

 









 























 



 



 

 



 

 

 

 









Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	Play/Pause		Play / Slow		Right		Right
	Stop		Stop / Hold		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		Down		Down
	<</REW		<< / Tune-		Recall		Back / Return
	>>/FF		>> / Tune+		Vol+		Vol+
	I<</Prev		I<< / Preset-		Page Up		CH+ / Page+
	>>I/Next		>>I / Preset+		Vol-		Vol-
	Audio		Audio / Lang I/II		Page Dn		CH- / Page-
	Subtitle		Subtitle / EQ		1		1
	Tv/Radio/MMB		TV/Radio /		2		2
	Setup		Setup / OPT /		3		3
	TTX		Text / Goto		4		4
	Menu		Menu / Home		5		5
	Up		Up		6		6
	Info		Info / Angle		7		7



