 


 




 



 
 
 
 


 


 


 
 

 
 
 

 
 
 


 

 
 
 

 
 


 





 




 

 






 
 
 

 
 
 

 

 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 i	 DISPLAY INFO Info
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 MENU	 TOP MENU MENU Menu
 6	 6	 Q. MENU	 E-MANUAL D.MENU D. Menu
 7	 7	 EXIT	 CLEAR EXIT Exit
 8	 8	 Recall	 FAV PRE-CH Pre Ch
 9	 9	 BACK	 RETURN BACK Back
 TV	 SEARCH TV/R TV/R	 Red	 A Red
 0	 0	 Green	 B Green
 V+	 + VOL Vol +	 Yellow	 C Yellow
 V-	 - VOL Vol -	 Blue	 D Blue
 P+	 + CH Ch +	 World	 -/-- GUIDE Guide
 P-	 - CH Ch -	 Music/Movie/Phot	 SETTINGS OPT Options
 Mute	 MUTE Mute	 Guide Tv	 SHIFT + SETTINGS OPT Shift + Options





Original		Replacement		Original		Replacement	
	* / o		Sleep				
	Games		Eject				
	[≡] / Text		Text				
	Netflix		Media				
	Lang		Dual				
	[-O-]		List				
	[≡] ..		Subt				
	Rec		Rec				
	Play		Play				
	OK		Ok				
	Stop		Stop				
	Pause		Pause				
	>>		>>				
	<<		<<				

