





 



 


 
 

 


 

 
 
 






 
 


 


 
 


 
 
 
 
 

 
 
 












 
 






Original		Replacement		Original		Replacement	
	Power		Power		Dn/>>>I		Ch -
	Tv-Out		AV		Menu		Menu
	1		1		>>		>>
	2		2		<<		<<
	3		3		Player		Yellow
	4		4		Stop		Stop
	5		5		Enter		Ok
	6		6		Right		Right
	7		7		Left		Left
	8		8		Up		Up
	9		9		Down		Down
	0		0		Mute		Mute
	Subtitle		Subt		Zoom		Shift + Eject
	Audio		Dual		Repeat		Text
	Vol+		Vol +		Setup		Options
	Vol-		Vol -		Display		Shift + Info
	Up/ <<		Ch +		Rotate		Back





	Original	Replacement		Original	Replacement
	S-Time	 Sleep			
	S-Mode	 Info			
	Movie	 Guide			
	Music	 Pre Ch			
	Photo	 +  Shift + Options			
	File	 Eject			
	TV-Out	 TV/R			

