











| Original  | Replacement  |
|---|--|
|  Power     |  Power            |
|  Eject     |  Eject / Surround |
|  Power Tv  |  Shift + Power   |
|  1         |  1                |
|  2         |  2                |
|  3         |  3                |
|  PR+ Tv    |  CH+ / Page+     |
|  5         |  5                |
|  6         |  6                |
|  PR- Tv    |  CH- / Page-     |
|  4        |  4               |
|  7       |  7              |
|  8       |  8              |
|  9       |  9              |
|  Vol+ Tv |  Vol+          |
|  Lock    |  Text / Goto   |
|  0       |  0              |

| Original  | Replacement  |
|---|--|
|  AV Tv       |  Shift + AV / Input / RDS |
|  Vol- Tv     |  Vol-                     |
|  Rec ITR     |  Rec / Rec Mode           |
|  LP          |  Display / Media          |
|  REW         |  << / Tune-               |
|  FF          |  >> / Tune+               |
|  Pause/Still |  Pause / Step / Freeze    |
|  Play        |  Play / Slow              |
|  Stop        |  Stop / Hold              |
|  i/Menu      |  Info / Angle             |
|  i/Menu     |  Menu / Home             |
|  Up/+      |  Up                     |
|  AV        |  AV / Input / RDS       |
|  Left      |  Left                   |
|  OK        |  OK                     |
|  Right     |  Right                  |
|  Clear     |  Exit / Cancel / Clear  |



