

 

 
 
 
 
 


 
 

 
 
 
 
 
 
 
 
 
 



 
 
 
 
 






Original	Replacement
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 Info	 Info
 Mute	 Mute
 Home	 Shift + Smart
 CH+	 Ch +

Original	Replacement
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 *	 Menu
 [≡]	 D. Menu
 Back	 Back
 Exit	 Exit
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Play	 Play



