



Original	Replacement	Original	Replacement
Power CD	Power	Mode	Media
OK/Play/Pause CD	Ok	Bluetooth/Pairing	Green
CD	Red	Power Bluetooth/Pairing	Shift + Power
I<< CD	Left	Info Bluetooth/Pairing/	Shift + Info
>>I CD	Right	OK/Play/Pause Bluetooth/Pairing	Play
Stop/Menu CD	Down	>>I Bluetooth/Pairing	>>
Vol+	Vol +	<< Bluetooth/Pairing	<<
Vol-	Vol -	Stop/Menu Bluetooth/Pairing	Stop
Mute	Mute	Album/Preset Up Bluetooth/Pairing/	Shift + Ch +
Album/Preset Up	Ch +	Album/Preset Bluetooth/Pairing/	Shift + Ch -
Album/Preset Down CD	Ch -	DAB/FM	Yellow
Info CD	Info	Power DAB/FM	1
Sound	Dual	Prog/Scan	Shift + Options
Prog/Scan CD	Options	Info DAB/FM	Back
Sleep/Timer	Smart	OK/Play/Pause DAB/FM	Pause
Clock	AV	Stop/Menu	Shift + Stop
Dim	Subt	>>I DAB/FM	>>I



