





 




 
 
 
 
 
 
 

 
 

 
 
 
 
 

 
 

 
 
 
 
 
 
 
 
 
 

 
 
 
 


 
 


 

 
 


 
 















Original	Replacement	Original	Replacement
 Standby	 Power	 P-	 Ch -
 STB PWR	 Shift + Power	 Mute	 Mute
 1	 1	 Micro/Q	 Format
 2	 2	 Home/Recents	 TV/R
 3	 3	 *	 Menu
 4	 4	 Back/Exit	 Back
 5	 5	 Guide	 Guide
 6	 6	 Mouse Up	 >>
 7	 7	 Mouse Down	 <<
 8	 8	 OK	 Ok
 9	 9	 Up	 Up
 0/Quick Access	 0	 Down	 Down
 List	 List	 Right	 Right
 AD	 Subt	 Left	 Left
 Vol+	 Vol +	 Netflix	 Shift + Media
 Vol-	 Vol -	 Amazon	 Media
 P+	 Ch +	 Source	 AV





Original	Replacement	Original	Replacement
 TEXT	Text	 REPEAT TEXT	Text
 T.OPT	T.Opt/Magic Link	 SETTINGS OPT	Options
 INFO	Info	 DISPLAY INFO	Info
 Play	Play	 PLAY MODE Play	Play
 Pause	Pause	 Pause	Pause
 LIVE ZOOM	Live	 ECO 3D	3D
 Red	Red	 A	Red
 Green	Green	 B	Green
 Yellow	Yellow	 C	Yellow
 Blue	Blue	 D	Blue

