


 

 

 

















 

 





 



 

 

 

 

 





 

 

 

 

 



 








Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Up		Up		PP		Pre Ch
	Down		Down		-/--		Shift + Guide
	Right		Right		P<P		Back
	Left		Left		CH-		Ch -
	OK/Select		Ok		CH+		Ch +
	Menu		Menu		Vol+		Vol +
	[i]/Info		Info		Vol-		Vol -
	1		1		Mute		Mute
	2		2		I-II		Dual
	3		3		DTV/TV		TV/R
	4		4		AV		AV
	5		5		Red/Sound/▲		Red
	6		6		Green/Picture/▼		Green
	7		7		Yellow/Feature		Yellow
	8		8		Blue/Install		Blue
	9		9		[=]/Text		Text



