 



 


 
 

 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Internet		Smart / List
	Source		AV / Input / RDS
	Lang		Audio / Lang I/II
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	LIB		Picture / Format
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	i		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	P:::P		Display / Media
	PR+		CH+ / Page+
	Vol-		Vol-
	FAV		Fav / Marker / PC
	PR-		CH- / Page-
	1		1





Original		Replacement		Original	Replacement
2	2	2	2		
3	3	3	3		
4	4	4	4		
5	5	5	5		
6	6	6	6		
7	7	7	7		
8	8	8	8		
9	9	9	9		
TEXT	Text	GOTO TEXT	Text / Goto		
0	0	0	0		
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--		

