


 


 
 

 
 
 
 

 



 


 

 
 



 



 



 



 

 
 


 
 
 





 


 




 
 



 




Original		Replacement		Original		Replacement	
	Power		Power		Return		Back
	TV/AV		AV		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		TV-Menu		Menu
	0		0		Exit		Exit
	-/-		Guide		Info		Info
	Eject		Eject		Subtitle		Subt
	Play/Pause		Play		Lan/Pict		Options
	Stop		Stop		Zoom/Sound		Format
	Mute		Mute		Sub/Nicam/A2		D. Menu



