

 








 

 

 

 


 



 






 

 

 



 

 
 
 


 
 


 
 


 







Original	Replacement	Original	Replacement
 On/Standby	 Power	 Preset Down	 Ch -
 Vol-	 Vol -	 Preset Up Tuner	 Ch +
 Vol+	 Vol +	 << Tape2	 <<
 CD	 Red	 >> Tape2	 >>
 Tuner/Band	 Green	 Play 1 Tape	 Left
 Tape (1-2)	 Yellow	 Stop 1 Tape	 Ok
 Video/AUX	 Blue	 Play Tape2	 Right
 Equalizer Mode	 Dual	 Rec/Pause	 Down
 X-Bass	 Subt	 Disc 1 CD	 1
 Play/Back CD	 Play	 Disc 2 D	 2
 Stop CD	 Stop	 Disc 3 CD	 3
 Pause CD	 Pause	 Memory CD	 Menu
 <</I<< CD	 I<<		
 >>/I>> CD	 >>I		
 Clear CD	 Exit		
 Random CD	 Media		
 Disc Skip CD	 Smart		

