 

 

 

 

 



 

 

 

 

 

 



 

 

 



 

 

 

 

 



 

 

 


 
 





 
 
 









Original	Replacement	Original	Replacement
 [i+]/[?]	 ANGLE INFO Info / Angle	 [> <]	 SHIFT + FORMAT PICTURE Shift + Picture / Format
 Power	 Power	 Red	 NETFLIX Red / Netflix / Search
 1	 TV 1 1	 Green	 APP Green / APP / Repeat
 2	 DVD 2 2	 Yellow	 YouTube Yellow / YouTube / Repeat
 3	 CD - DB 3 3	 Blue	 Prime Video Blue / Prime Video / Random
 4	 VIDEO 4 4	 [I]	 GUIDE EPG Guide / EPG / -/--
 5	 TAPE 5 5	 Up	 Up
 6	 TUNER 6 6	 Source	 RDS AV INPUT AV / Input / RDS
 7	 AUX - HDD 7 7	 Left	 Left
 8	 USB 8 8	 OK	 OK
 9	 BLUETOOTH 9 9	 Right	 Right
 [≡]	 GOTO TEXT Text / Goto	 Return	 SHIFT + RETURN BACK Shift + Back / Return
 0	 HDMI - SAT 0 0	 Down	 Down
 Recall	 RETURN BACK Back / Return	 Tools	 OPT-TOOLS SETUP Setup / OPT /
 Digital/Analog	 MEDIA DISPLAY Display / Media	 Menu	 HOME MENU Menu / Home
 A/B	 SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube /	 I<<	 PRESET- I<< / Preset-
 Format	 FORMAT PICTURE Picture / Format	 ←	 SHIFT + TUNE- ← Shift + << / Tune-



 
 

 

 

 




 
 
 

 

 






Original	Replacement
 →	 Shift + >> /
 >>	 >> / Preset+
 < < < <<	 << / Tune-
 Play	 Play / Slow
 >> > >	 >> / Tune+
 Theatre	 Smart / List
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Prog-	 CH- / Page-
 Rec	 Rec / Rec Mode
 Rec Pause	 Shift + Pause / Step /
 Rec Stop	 Shift + Stop /

Original	Replacement





Original	Replacement
 [i+]/[?]	 Info / Angle
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return
 A/B	 Yellow / YouTube / Repeat
 Up	 Up
 Left	 Left
 OK	 OK

Original	Replacement
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 I<<	 I<< / Preset-
 ←	 Shift + << /
 →	 Shift + >> /
 >>I	 >>I / Preset+
 <II/<I/<<	 << / Tune-
 Play	 Play / Slow
 >>I/>II>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Top Menu	 D.Menu / Top
 Menu BD/DVD	 Menu / Home

 



 

 

 



 


 
 



 

 

 

 

 





 

 



 





 

 









 




 
 







Original	Replacement	Original	Replacement
Info / Angle		Green / APP / Repeat	
	Power		Yellow / YouTube / Repeat
	1		Blue / Prime Video / Random
	2		Up
	3		Left
	4		OK
	5		Right
	6		Back / Return
	7		Down
	8		Setup / OPT /
	9		Menu / Home
Text / Goto		I<< / Preset-	
	0		>>I / Preset+
	Display / Media		<< / Tune-
Shift + Stop /		Play / Slow	
Picture / Format		>> / Tune+	
	Red / Netflix / Search		Smart / List





Original	Replacement	Original	Replacement
	 Info / Angle		 OK
	 Power		 Right
	 1		 Shift + Back / Return
	 2		 Down
	 3		 Menu / Home
	 4		 I<< / Preset-
	 5		 Shift + << /
	 6		 Shift + >> /
	 7		 >> / Preset+
	 8		 << / Tune-
	 9		 Play / Slow
	 0		 >> / Tune+
	 Back / Return		 Pause / Step / Freeze
	 Yellow / YouTube / Repeat		 Stop / Hold
	 Up		 Mute / Dimmer
	 AV / Input / RDS		 Vol+
	 Left		 Vol-



