



| Original | Replacement | Original | Replacement |
|------------|-------------|-----------|-------------|
| Power | Power | Play | Play |
| Open/Close | Eject | Stop | Stop |
| 1 | 1 | Pause | Pause |
| 2 | 2 | Info/Menu | Info |
| 3 | 3 | Home | Smart |
| 4 | 4 | Enter | Ok |
| 5 | 5 | Up | Up |
| 6 | 6 | Down | Down |
| 7 | 7 | Right | Right |
| 8 | 8 | Left | Left |
| 9 | 9 | Back | Back |
| 0 | 0 | Disc Menu | D. Menu |
| AV Input | AV | Red | Red |
| >> | >> | Green | Green |
| << | << | Yellow | Yellow |
| I<< | I<< | Blue | Blue |
| >>I | >>I | Repeat | Text |



