

 

 
 
 


 






 

 
 













 


 
 














 








 














 

 







 





 

 









 





| Original | Replacement |
|---|---|
|  Function |  Smart / List |
|  Power |  Power |
|  Open/Close |  Eject / Surround |
|  Sleep |  Sleep / Timer |
|  Title |  Sound / Title |
|  Display |  Display / Media |
|  Menu |  Menu / Home |
|  Setup |  Setup / OPT / |
|  Preset Up |  Shift + >> / Preset+ |
|  Preset Up |  Up |
|  Left/Tun- |  Left |
|  Left/Tun- |  Shift + << / |
|  Enter |  OK |
|  Right/Tun+ |  Right |
|  Right/Tun+ |  Shift + >> / |
|  Preset Down |  Shift + I<< / Preset- |
|  Preset Down |  Down |

| Original | Replacement |
|--|---|
|  Return |  Back / Return |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  Play / Mo/St. |  Play / Slow |
|  Pause/Step |  Pause / Step / Freeze |
|  I<< Skip |  I<< / Preset- |
|  << Scan |  << / Tune- |
|  Scan >> |  >> / Tune+ |
|  Skip >>I |  >>I / Preset+ |
|  Audio/Tv->HT SPK |  Audio / Lang I/II |
|  Vol+ |  Vol+ |
|  Night |  Shift + Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  Vol- |  Vol- |
|  ♪/Special EQ |  Shift + Subtitle / EQ |
|  1 |  1 |
|  2 |  2 |





| Original | Replacement |
|--|---|
|  3 |  3 |
|  Random/Repeat |  Green / APP / Repeat |
|  Random/Repeat |  Blue / Prime Video / Random |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  [...] / Subtitle |  Subtitle / EQ |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Power Tv |  Shift + Power |
|  PR/CH+ Tv |  Shift + CH+ / |
|  Vol+ TV |  Shift + Vol+ |
|  Prog.Memo |  TV/Radio / |
|  Input Tv |  Shift + AV / Input / RDS |
|  PR/CH- Tv |  Shift + CH- / |

| Original | Replacement |
|--|---|
|  Vol- Tv |  Shift + Vol- |
|  Clear |  Exit / Cancel / Clear |
|  RDS |  AV / Input / RDS |
|  PTY/Resolution |  Picture / Format |

