







 

 

 
 






 

 



 







 
 


 









 

 

 



 

 

 



 







 







Original	Replacement	Original	Replacement
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Find		Shift + Red / Netflix / Search
	Ill/Adjust		D.Menu / Top
	Source		AV / Input / RDS
	Options		Setup / OPT /
	OK		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Home		Menu / Home
	Back		Back / Return
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original	Replacement	Original	Replacement
 9	 9		
 0	 0		
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		

