





 

 
 








 
 

 






 




 
 



 
 

 
 
 
 

 


 

 

 
 

 







 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv/DTV		Smart
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡]/Text		Text
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[^]/[+]		Format
	Tv/Radio/[?]		TV/R
	Guide/[♦]		Guide



 







 
 
 

 




 
 



 
 
 
 


 





Original	Replacement	Original	Replacement
[^]/Timer	3D		
I-III/[X]	SOUND DUAL		
[...] [=i]	AD SUBT		
Play	PLAY MODE		
<<	<<		
>>	>>		
Rec/Top Menu	REC MODE		
Stop	Stop		
Pause	Pause		
Zoom	ZOOM		
(↔)	FAV PRE-CH		
J-PC	APP MEDIA		
[■]-PC	CLEAR EXIT		






 
 

 





 

 





	Original	Replacement	Original	Replacement
	 Power	 Power		
	 Menu	 Menu		
	 Back	 Back		
	 OK	 Ok		
	 Up	 Up		
	 Down	 Down		
	 Right	 Right		
	 Left	 Left		
	 <<	 <<		
	 Play	 Play		
	 >>	 >>		
	 Stop	 Stop		
	 Pause	 Pause		
	 Rec/Top Menu	 Rec		
	 ↑	 Ch +		
	 ↓	 Ch -		





Original		Replacement		Original		Replacement	
	Power		Power				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				
	Up		Up				
	Down		Down				

