



Original	Replacement
Source	Shift + AV / Input / RDS
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0/--	Shift + Guide / EPG / -/--
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left/Zoom-	Left
OK	OK
Right/Zoom+	Right
Down	Down
Guide	Guide / EPG / -/--
Return	Back / Return
Info	Info / Angle
Vol+	Vol+
Presets	Setup / OPT /
PR+	CH+ / Page+
Vol-	Vol-
PR-	CH- / Page-
Mute	Mute / Dimmer
Red/O Lang	Red / Netflix / Search












 
 

 

 

 





 

 
 





 



 

 



 

 

 

 



 

 

 

 

 

 



Original	Replacement	Original	Replacement
 Red/O) Lang	 Audio / Lang I/II		
 Green/Subtitles	 Subtitle / EQ		
 Green/Subtitles	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet/Text	 Text / Goto		
 Stop Text	 Shift + Stop /		
 ??? Text	 Sleep / Timer		
 Zoom Text	 Zoom / Size		
 Media/Digital	 Display / Media		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 T-Link	 D.Menu / Top		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		







Original	Replacement
	 Power
	 List
	 Shift + 1
	 Shift + 2
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 Shift + Guide / EPG / -/-
	 Exit / Cancel / Clear
	 Menu / Home

Original	Replacement
	 Up
	 Left
	 OK
	 Right
	 Down
	 Guide / EPG / -/-
	 Back / Return
	 Info / Angle
	 Vol+
	 Setup / OPT /
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Mute / Dimmer
	 Audio / Lang I/II
	 Red / Netflix / Search
	 Subtitle / EQ









Original	Replacement
Source / Eject	Eject / Surround
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	Shift + Guide / EPG / --
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / --
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
PR +	CH+ / Page+
Vol -	Vol-
PR -	CH- / Page-
Mute	Mute / Dimmer
Red / A-B	Shift + Yellow / YouTube /
Red / A-B	Red / Netflix / Search



