


 







 










 



 

 



 





 

 

 

Original	Replacement
	Power
	Rec / Rec Mode
	Red / Netflix / Search
	I<< / Preset-
	Green / APP / Repeat
	Stop / Hold
	Yellow / YouTube / Repeat
	Play / Slow
	Blue / Prime Video / Random
	>>I / Preset+
	AV / Input / RDS
	Audio / Lang I/II
	Picture / Format
	Zoom / Size
	Menu / Home
	Text / Goto
	Pause / Step / Freeze

Original	Replacement
	Left
	Up
	Right
	OK
	Down
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Sound / Title
	CH- / Page-
	Smart / List
	1
	2
	3
	4
	5





 











 

 



 
 
Original	Replacement	Original	Replacement
0	 Eject / Surround		 Text / Goto
-0-	 Subtitle / EQ		 Left
Power	 Power		 Up
Rec	 Rec / Rec Mode		 Right
I<<	 I<< / Preset-		 OK
Red	 Red / Netflix / Search		 Down
Green/[[]]	 Green / APP / Repeat		 Vol+
Stop	 Stop / Hold		 Mute / Dimmer
Play	 Play / Slow		 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat		 Vol-
>>I	 >>I / Preset+		 Sound / Title
AV/[?]	 AV / Input / RDS		 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II		 Smart / List
[<>]/[+]	 Zoom / Size		 1
PIP [■]	 Picture / Format		 2
Menu	 Menu / Home		 3
Pause	 Pause / Step / Freeze		 4

	 Text / Goto
	 Left
	 Up
	 Right
	 OK
	 Down
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Sound / Title
	 CH- / Page-
	 Smart / List
	 1
	 2
	 3
	 4





Original	Replacement
 Power	 Power
 -O-	 Subtitle / EQ
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡ ≡]	 Audio / Lang I/II
 [<>]/[+]	 Zoom / Size
 Pause	 Pause / Step / Freeze
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart []	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Fav / Marker / PC

