



Original	Replacement
Standby/On	Power
Open/Close	Eject / Surround
Source	AV / Input / RDS
USB	Shift + 8
DTV/Analog	Smart / List
HDD	Shift + 7
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/DVD	Display / Media
0	0

Original	Replacement
Copy	Setup / OPT /
I<<	I<< / Preset-
Repeat	Shift + Green / APP /
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Play	Play / Slow
>>	>> / Tune+
Tv Vol+	Vol+
Mute	Mute / Dimmer
Prog+	CH+ / Page+
Tv Vol-	Vol-
Audio	Audio / Lang I/II
Prog-	CH- / Page-
Menu	Menu / Home
Up	Up























Original	Replacement
Return	Back / Return
Left	Left
OK	OK
Right	Right
Info	Info / Angle
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Title List/Disc Menu	D.Menu / Top
Subtitle	Subtitle / EQ
Marker	Fav / Marker / PC
Play List/Title Menu	Shift + Menu /
Text	Text / Goto
Tv/Radio	TV/Radio /

Original	Replacement
FAV List	Shift + Fav / Marker / PC
Timer	Sleep / Timer
Rec	Rec / Rec Mode
Guide	Guide / EPG / -/-
Rec Mode	Shift + Rec / Rec Mode
Rec Pause/Time Shift	Shift + Pause / Step /





Original	Replacement	Replacement
Standby/On		Power
Mute		Mute / Dimmer
Tv/DVD		TV/Radio /
Source		AV / Input / RDS
Tv Vol+		Vol+
Prog+		CH+ / Page+
Tv Vol-		Vol-
Prog-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9

Original	Replacement	Replacement
0		0

